

Installation Instructions
for Columns

Each Protect-it MAXI™ has 4 pin location holes, two per side into which the connection pins can be inserted. This choice of holes makes Protect-it MAXI expandable to suit multiple column sizes.

The best pin location hole for the application will depend on the column size. As a guide, the inner holes are generally used for corners.



INSTALLATION INSTRUCTIONS

For other languages, visit www.protect-it.com.au

1

Remove the MAXIs from the package containing 20 protect-it MAXIs and 8 connection pins.



2

Lay the first layer of Protect-it MAXIs loosely around the column.



3

Lay the second layer of Protect-it MAXIs offset to the first. Make sure the holes are aligned.



4

Insert 7 of the pins from the top into the most suitable holes. Do not insert the last pin yet.



5

Remove the unit from the column and turn it upside down so the pins heads are at the bottom.



6

Push the Protect-it MAXIs to the bottom of the pins, and return it to surround the column.



7

Assemble the remaining Protect-it MAXIs until there are five layers. (500mm high)



8

Insert the last pin from the top to complete the assembly.



9

Your completed Protect-it MAXI should look like this.



10

To increase the height of column protection, repeat steps 1-8



REPLACEMENT OF DAMAGED PARTS

- Remove one pin and unwrap the assembly from the column
- Replace the damaged part
- Reassemble the unit (leaving the last pin)
- Wrap around the column
- Attach the last pin

www.protect-it.com.au

